



CHESS CLOCK TIMER

RGS 302


1. Mode settings



Press and hold  button until the beep sounds




Press and release  /  to switch modes

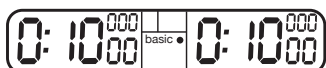


Press and release "basic" to confirm 

2. Time settings


Use basic mode as an example

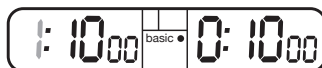

Press and release the 
Press and release  / 
to set the hour

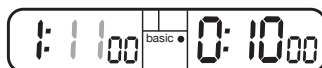


Press and release once 
Press and release  / 
to set the hour

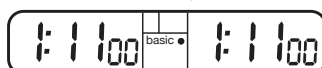

Repeat the previous step until all time settings are complete, then press and release  to complete the setting

3. Start the timer

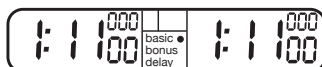


Press and release 
to start the timer


SKAAKKLOK TYDMETER

RGS 302


1. Modusinstellings

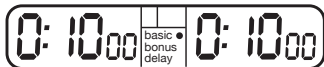

Druk en hou die  knoppie in totdat die piep klink

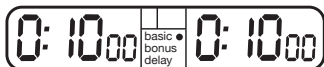


Druk en laat los  /  om modi te verander

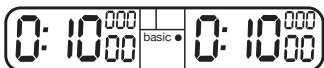

Druk en laat "basies" los om te bevestig 

2. Tydinsettings

Use basic mode as an example

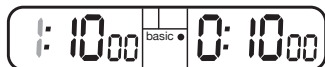


Gebruik basiese modus

as 'n voorbeeld 

Druk en laat los die  / 


Druk en laat los om die uur in te stel

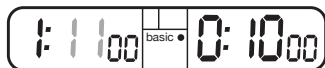

Druk een keer en laat los 

Druk en laat los  / 

om die uur in te stel

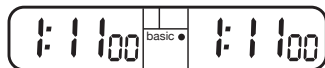

Herhaal die vorige stap totdat al die tydinsettings voltooi is, druk dan en laat los  om die instelling te voltooi.

3. Begin die Tydmeter



Druk en laat los 

om die Tydmeter te begin